



M/Y CHARADE
Safety Servicing Schedule

NUMBER	EQUIPMENT	PERIOD
S18	DIESEL FIRE PUMP	MONTHLY

Estimated Time to Complete Task: 30 Minutes

1. READY A FIRE HOSE AND OPEN UP THE HYDRANT.
2. HAVE A CREW MEMBER OPEN THE NOZZLE UP AND FIRMLY HOLD IT!
3. OPEN THE BLACK EXHAUST VALVE WHICH IS LOCATED UNDER THE DECK ENTRANCE ON THE PORT SIDE.
4. OPEN UP THE RAW WATER INTAKE VALVE LOCATED UNDER THE DECK PLATES AS SHOWN BELOW.
5. SHUT DOWN THE LAZARETTE AIR CONDITIONING BREAKERS LOCATED PORT SIDE AFT OF THE AIR HANDLER.
6. CLOSE THE TWO RED HANDLED PVC VALVES THAT FEED RAW WATER TO THE AIR CONDITIONING BOXES. ONE VALVE IS LOCATED ON THE PORT SIDE WALL DIRECTLY AFT OF THE HANDLER. THE OTHER IS LOCATED ON THE AFT WALL BEHIND THE SCUBA SET UP THAT IS NEXT TO THE WHITE DRAWERS. YOU NEED TO PULL OUT THE SCUBA SET UP TO REACH THE VALVES.
7. FLIP OPERATION LEVER (BLACK) TO THE RIGHT SO THAT IT IS ABOVE THE "RABBIT" OR FAST SPEED SETTING LOCATED ON THE FRONT OF THE PUMP.
8. MAINTAIN PROPER FOOTING AND STRONGLY PULL THE STARTER CORD. THE PUMP SHOULD START.
9. ONCE THE PUMP IS RUNNING, CONFIRM THE DECK VALVES ARE OPEN AND A GOOD WATER FLOW IS OBSERVED.
10. TO SHUT DOWN THE PUMP, HOLD THE STOP LEVER (RED) TO THE LEFT FOR 5 SECONDS OR MORE.
11. CLOSE THE RAW WATER INTAKE VALVE AND THE EXHAUST VALVE.
12. RETURN ALL OTHER VALVES TO THEIR NORMAL OPERATING POSITIONS.
13. FILL THE DIESEL TANK WITH CLEAN DIESEL.
14. DRAIN THE PUMP BY WAY OF THE PLUG ON THE PORT SIDE OF THE PUMP. FILL THE PUMP WITH FRESH WATER VIA THE PRIMING PLUG LOCATED ON THE TOP OF THE UNIT.



Diesel Fire Pump



Raw Water Intake

